

The microphone uses a 9V center positive 1A supply. Typical 9V supplies are center negative – please be aware the use of an incorrect polarity will destroy the cricuitry.

Microphone is connected to the preamplifier through a mini-XLR cable. There is active 9V on these terminals, do not attempt to connect to a different microphone or preamplifier.

Microphone capsule is a genuine carbon element - noise and distortion are to be expected.

The microphone will work poorly in live sound enivoments.

Demo available at

https://www.youtube.com/watch?v=QBxb6zBSHHg